

 
RAIDON

iUM2776P 快速安裝導引

產品外觀圖與包裝內容物


前視圖與後視圖

iUM2776P前視圖



- A 硬碟托盤把手
- B 硬碟托盤彈出按鈕
- C 硬碟LED指示燈

 iUM2776P背視圖



- D SATA 15-pin電源輸入埠
- E MCIO (SFF-TA-1016)連接埠

包裝內容物:

- iUM2776P x1
- 快速安裝導引 x1
- 螺絲與鑰匙

請注意:

- 本產品不含MCIO傳輸線。如果需要，請另行採購。
- 請檢查產品和所有隨附附件是否有損傷或缺失零件。如果您遇到任何問題，請聯絡您的產品供應商。
- 如需更多資訊、資源和下載相關資料，請造訪RAIDON 官方網站www.RaidonTek.com。

LED狀態指南

狀態	硬碟燈號
硬碟閒置	藍燈恆亮
資料存取中	藍燈閃爍 (註1)
沒有磁碟或硬碟故障	紅燈恆亮

註 1: 對於某些SSD, 資料存取時, 硬碟 LED 可能不會閃爍。



1

v0.1(Dec. 2025)

5. 裝回上蓋: 將上蓋裝回。

6. 插入硬碟托盤: 關上硬碟托盤把手後將硬碟托盤放回iUM2776P中。

7. 開啟電源


請開啟系統電源, 作業系統應會自動偵測硬碟。

8. 格式化硬碟

如果必要, 請依照作業系統指示格式化硬碟。

如何調整門鎖位置

按下門鎖並旋轉 90 度即可取下。移至適當位置後, 反向操作即可固定門鎖。

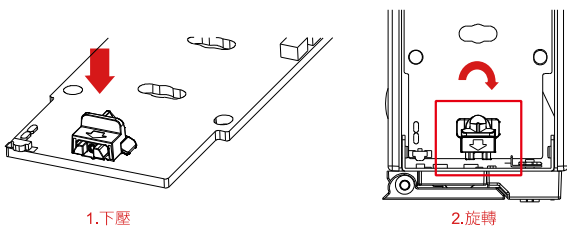

3

硬體安裝


請參照下列步驟, 完成 iUM2776P 的硬體安裝:

1. 安裝設備: 將iUM2776P放入電腦機殼中, 使用包裝隨附的螺絲將其正確固定在所需的托架位置。然後接上必要的連接線。


2. 開硬碟托盤: 使用包裝隨附的鑰匙解鎖硬碟托盤。將托盤彈出按鈕向右推, 然後將硬碟托盤拉出。



3. 打開上蓋: 打開上蓋。

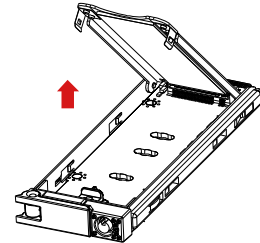

4. 安裝M.2 NVMe SSD: 插入一個M.2 NVMe SSD並用門所固定。

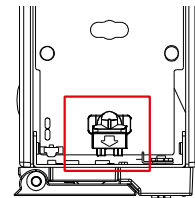

2

使用前注意事項

1. 備份資料 - 確保所有重要文件都有備份
2. 靜電接地 - 將自己接地來防止靜電
3. 拔掉電源 - 安裝前關閉電腦並拔掉電源插頭
4. 使用無靜電表面 - 避免在地毯或導電表面上作業
5. 閱讀說明 - 開始安裝前查看所有步驟

感謝您選擇RAIDON產品!

請注意, 本手冊中的資訊在出版時是正確的, 但產品規格在出貨前可能已變更。有關最新規格與更新, 請造訪www.RaidonTek.com或聯絡您的經銷商。

如果您對RAIDON產品有任何疑問, 或是要取得最新的產品手冊或韌體更新, 請發送電子郵件到 supporting@raidontek.com

4

RAIDON

 
 
Quick Installtion Guide for iUM2776P

Product Diagrams and Package Contents

Front and Rear Views:

iUM2776P Front View

iUM2776P Rear View



- A** Disk Tray Handle
- B** Disk Tray Ejection Button
- C** Disk LED Indicator
- D** SATA 15-pin Power Connector
- E** MCIO (SFF-TA-1016) Connector

Package Contents:

- iUM2776P unit x1
- Quick Installation Guide x1
- Screws & Tray lock keys

Please Note:

- A MCIO Cable is not included. If needed, please purchase it separately.
- Check the product and all included accessories for defects or missing parts. If you encounter any issues, contact your product supplier.
- For additional information, resources, and downloads, please visit the RAIDON official website at www.RaidonTek.com.

LED Status Guide

Status	HDD Status Light
HDD idle	Blue light always On
Data access	Blue light flashing (Note 1)
No Disk	Red light always On

Notes: For some SSDs, the Disk LED may not flash during data access.




1

v0.1 (Dec. 2025)

- 5. Put the Top Cover Back:** Close the top cover to the case.
- 6. Insert the Disk Tray:** Close the handle and slide the tray back into the iUM2776P unit.
- 7. Power On:** Turn on the system; the OS should auto-detect the disk.
- 8. Format the Disk:** Follow OS prompts to format the disk if necessary.

How to adjust the latch position:

Press the latch and rotate 90 degrees then you can remove it. After moving to the appropriate position, reverse the operation to fix the latch.

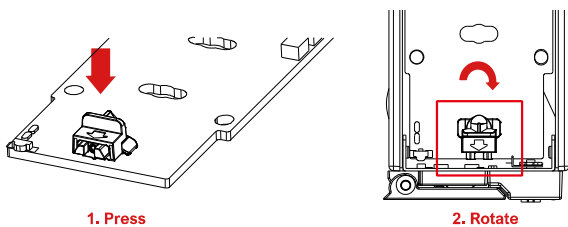

3


Hardware Installation

Follow these steps to install the iUM2776P:


- 1. Install the Unit:** Place the iUM2776P into your computer chassis, securing it properly in the desired bay position using the screws provided. Then, make the necessary connections.
- 2. Open the Disk Tray:** Use the key, press the tray ejection button to the right, and pull the tray out.



- 3. Open the Top Cover:** Open the top cover from the case.

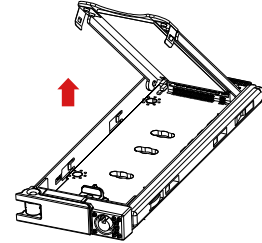

- 4. Install M.2 NVMe SSD:** Insert a M.2 NVMe SSD and secure with latch.

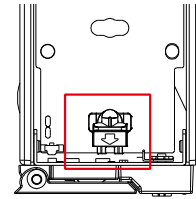

2

Precautions Before Use

- 1. Backup Data –** Ensure you have a backup of all important files.
- 2. Ground Yourself –** Prevent static discharge by grounding yourself.
- 3. Unplug Power –** Turn off and unplug your computer before installation.
- 4. Use a Static-Free Surface –** Avoid working on carpets or conductive surfaces.
- 5. Read Instructions –** Review all steps before starting.

Thank you for choosing RAIDON products!

Please note that the information in this manual was accurate at the time of publication, but product specifications may have changed prior to shipping. For the latest specifications and updates, visit www.RaidonTek.com or contact your sales representative.

For any inquiries about RAIDON products, or to receive the latest product manuals or firmware updates, please email us at: supporting@raidontek.com.

RAIDON is a brand under RAIDON Technology, Inc.
All content in this manual is copyrighted by RAIDON Technology, Inc.

4